

DESIGNSPARK MECHANICAL




Select		
	Click to select one object	
	Double-click to cycle through Face / Edge / Curve loops	
	Triple-click to select all the faces of a body	
	Add or remove an object from the selection	
	Select all objects between the original selection and this object	
	Select a driving or alternate object for many tools (in blue)	
	Select all objects completely within the box	Ctrl + Drag toggles selection
	Select all objects partially within the box	Shift + Drag adds to selection
	Select other objects under the cursor	
	<ul style="list-style-type: none"> Click to get command menus Drag to invoke gesture shortcuts 	
	Use the Select-Bounds toolguide to stop the propagation of selected faces and edges	
	Revert to the last set of selected items	
	To exit current tool and return to selection	

Orient	
	Spin
	Zoom
	Scroll
	Pan
	Snap View
	Double-click
	Home View
	Plan View
	Zoom Fit selection
	Next view


Dimension	
	Edit dimension while dragging
	Toggle between editable dimensions
	Hover over geometry to dimension from it while sketching
	<ul style="list-style-type: none"> Accept the dimension value Complete most tools
	Create temporary objects
	Create a linear / angular ruler dimension
	Create Group and store ruler dimension
	Drive a ruler dimension with an Annotation dimension
	Select an Up To reference



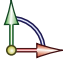

Files	
	Save
	Save As
	Save As New Version

Sketch & Section

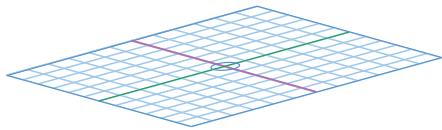	<ul style="list-style-type: none"> Select sketch curves and use model edges Select faces and edges by their section lines and points
	Drag sketch and section curves
	Move and Rotate curves


- Ctrl**
 - Press to copy in Drag and Move
 - Toggle extension indicators
- Shift**
 - Toggle snapping to grid
 - Grab dimension reference
- Esc**
 - Cancel an in-progress action



-  Back to 3D
-  New sketch grid location (re-select)
-  Move sketch grid
-  Plan View

Splines


Select entire spline to move

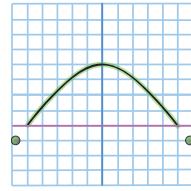

- Add spline point
- Remove spline point
- Measure curvature
- Drag endpoint tangency

Scale/Rotate

Drag Rotate
Re-center

Fix Aspect Ratio  Reorient Box

Snaps

				
On Curve	Grid Point	Mid Point	End Point	Multiple Snap Types

Indicators

Tangent, Extension, Arc Center, Right Angle, Angle, Golden Rectangle, Square

Dimension Anchors



Select reference curve or point [also with **Shift**]

Move dimension base point [also with blue circle]

Change dimension reference angle [also with blue line]

Associations

Offset & Shell

Create with  and  tools


Show offset baseline faces




Pull option: Maintain offset


Change face property: None

Change face offset: This face
Other face
Center


Round & Chamfer


Create by pulling  edges


Toggle with   

Remove with  or by changing face property


Coaxial


Create:  Create Coaxial Group

Remove:  Remove from Coaxial Group

Change:  Set Cylinder Diameter

Pattern


Create with  Move + Create Patterns




Remove with  Unpattern Member



Works on:

- Solids, surfaces, curves, planes, beams
- Protrusions and depressions
- Components
- Imported features of interest

Mirror

Set up: face + face + 

Add to:  then  Or  Faces **Ctrl**

Remove:  then  Faces **Ctrl**